“T” Tie Plate

Truss Tie

Item #: 56612

Ornamental Wood Ties

Replacement Parts

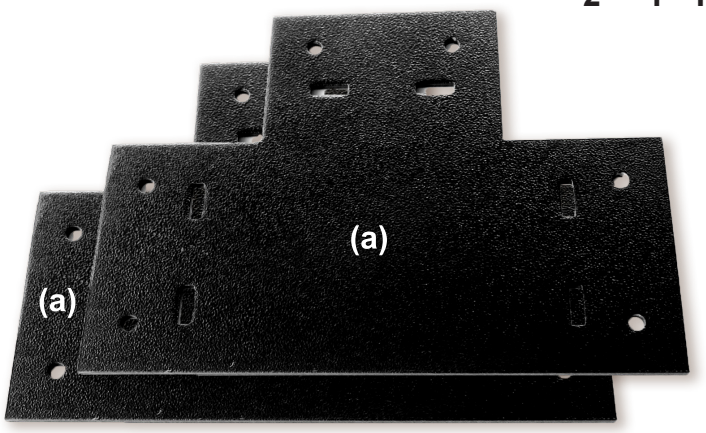

Kit Includes:

2 “T” Tie Plates (a)

Number of Truss Accent Kits Required:

♦3 *Sold Separately*

- Connector plate for 90 deg. “T” joint.
- Designed for connection material >5 ½”
- Truss Accents, Hardware, & Hex Cap Nuts sold separately
- 3/16” thick steel

patent pending

Truss Accent Item #: 56612

Truss Tie - Installation Guide

General Guidelines:

- Materials are heavy and bulky minimum of 2 people are required for most installations
- Brace and tie off large beams and posts until all connections are made
- Wear proper safety equipment
- Check with local authorities and home owners association before construction
- Check for underground and or hidden utilities that could be damaged
- Be sure to use the right tool for the job
- Plan ahead and have the required hardware, fasteners and tools close at hand before starting the installation

Steps:

1. Locate the plate in the correct location
2. A clamp or similar device can be helpful to keep all parts tight and in place
3. Remove threaded covers from all Hex Cap Nuts
   a. Insert Lag Bolts into Cap Nuts
   b. OWT Lag Bolts require a 3/8” Hex Bit
4. Position the Truss Accent on the truss plate and attach with lag bolts
5. Repeat for all hardware locations
6. Replace Threaded Covers until flush with edge of the nut
7. HINT: Use tread lock on Threaded Covers in accessible areas

Use and Care: This hardware may not be suitable for every situation or installation application. A design professional should be consulted to ensure the specific installation application meets local building code requirements.

If hardware becomes dirty clean with soap and water. Avoid abrasions to surface and touch up any scrapes with paint. Rinse with fresh water if hardware comes in contact with ice salt or salt water.

© 2012 OZCO Building Products. All Rights Reserved. Design and Marketing by LiquidFly Designs™